

YONDR PROGRAM MAINTENANCE GUIDE

CLEANING YOUR YONDR POUCHES: DISINFECTANT SPRAY OR WIPE

- Open pouches and turn inside-out
- Wipe or spray all internal parts
- Close pouches
- Wipe or spray all external parts of pouch



CLEANING YOUR YONDR POUCHES: WASH & AIR DRY

- Close all pouches and wash for 30 minutes on warm or cold setting using regular detergent.
- Air dry pouches. Avoid using a dryer, as heat can lead to damage of the pouch fabric and/or locking mechanism.

Yondr pouches are made primarily from plastic and neoprene.

Yondr pouches do not block signals. Silenced phones or phones on airplane mode can still broadcast GPS location information.

The lock is a spring mechanism. There is no magnet in the pouch itself.

Yondr pouches should be stored locked when not in use to protect the pin from damage or from poking you.

Magnets not issued by Yondr may damage both the locking mechanism and the actual device in the pouch.

Most of the time, you can spot clean your Yondr pouch.

While they can be machine washed, do so sparingly as they are not designed for routine machine washing.